

# INSTALLATION INSTRUCTIONS



Installation is simple. Undo the four bolts holding the seat rails in the plane. Remove the seat, rails and all.

Slip the seat pad on over the seat. Pass the longest strap around the outside of the black seat frame thread through the cleat and pull snug. Then thread and pull the other straps snug.

Position The Lower lumbar Pillow to your "sweet spot".

Do the same with the seat back cover. The long straps go around the outside of the black seat frame. Then thread and pull the other straps snug.

The seat will make you ride higher. Lower the seat on the rails by one and a half inches. When lowering your seat please refer to the Air Tractor Maintenance Manual.

The seat is attached to the seat rails with two C4-13R-303 Faspins. Do not raise the seat above factory installed position but a tall person may want to lower the seat some. This is done by lowering the seat to the desired position and drilling the seat rails 15/64 and then reaming 1/4" for the Faspin installation. Make sure the lowered position clears the push-rod from the control stick.



*Warning. The seat back cushion places the pilot in a farther forward position, thus making him more vulnerable to striking the instrument panel in a bad crash.*